

## RS232\_ Internet Radio Command Code (Upgrade)

The communication between computer and unit is UART.	
Start bit : 1	Data bits : 8
Stop bit : 1	Parity bit : none
Code : HEX	Baud : 19200
Function	Code
STAND BY	0x01
1	0x02
2	0x03
3	0x04
4	0x05
5	0x06
M1	0x07
M2	0x0A
M3	0x0B
M4	0x0E
M5	0x0F
SHIFT	0x15
PRESET	0x17
SLEEP	0x18
MENU	0x19
INFO	0x1A
ALARM	0x1B
ENTER / TUNER SCAN	0x1C
MODE	0x1D
MENU UP / TUNNIG UP	0x1E
MENU DOWN / TUNNIG DOWN	0x1F
AUTO SCAN UP	0x20
AUTO SCAN DOWN	0x21
LEFT (BACK)	0x22
RIGHT	0x26
REPEAT	0x27
SHUFFLE	0x2A
PLAY / STOP	0x2B
VOLUME -	0x2C
VOLUME +	0x2D
MUTE	0x2E
PREV	0x2F
F.B	0x30
F.WD	0x31
NEXT	0x32
6	0x33
7	0x34
8	0x35
9	0x36
10	0x37
M6	0x3A
M7	0x3B
M8	0x3C
M9	0x3D
M10	0x3E
INTERNET RADIO Mode	0x3F
MUSIC PLAYER Mode	0x40
DAB Mode	0x41
FM Mode	0x42
AUX IN Mode	0x43